

TEMES 1.0.34 and USBSER

General Restrictions

TEMES 1.0.34 uses the Tellert Device Manager 1.1.12. The TDM (= Tellert Device Manager) is accessible via TEMES main menu *Hardware* → *Device Manager...* The TDM searches (during its first start) per default for all available serial ports in the contiguous range from COM1 to COM8. COM3 and higher are hidden from the TDM by default. To make these ports visible for the TDM, first choose tab *Options*, select the corresponding port, and press the button *Properties*. Then, uncheck the check box *Hide port from Tellert Device Manager*. Finally, in order to make the TDM to accept these changes, close all open TEMES windows, and restart TEMES together with the TDM.

USB SER Driver Installation

The device driver for USBSER is available either on the CD-ROM in the folder `\Drivers\USB SER` or from the Internet via <http://tellert.de/?product=USB SER>. Best practice is to run the automatic FT232R device driver installer before the USB SER is plugged in for the first time.

Windows Device Manager

The Windows Device Manager is started as follows: Choose *System* from the *Control Panel*. Choose tab *Hardware* if it is available, then click on *Device Manager*. (A faster method is to right-click on the *Computer* icon and to choose menu item *Properties*. Further methods are to press the hotkey *Windows+Pause* or to run `devmgmt.msc`).

USB SER Port Settings

The advanced port settings can be modified as follows: Choose the corresponding port in the Windows Device Manager. Right-click on the port and choose menu item *Properties*. Select tab *Port Settings* and then press button *Advanced...*

Recommended Settings

The COM port number should be chosen that it lies within the range of the TDM COM range. The COM range should therefore be numbered contiguously from COM1 to maximal COM8. All further values of the advanced port settings should be set to their corresponding minimum values, and all check boxes should be unchecked for Windows 2000 or better. The check box *Disable PNP* should be checked for Windows 98/ME.

Screenshots

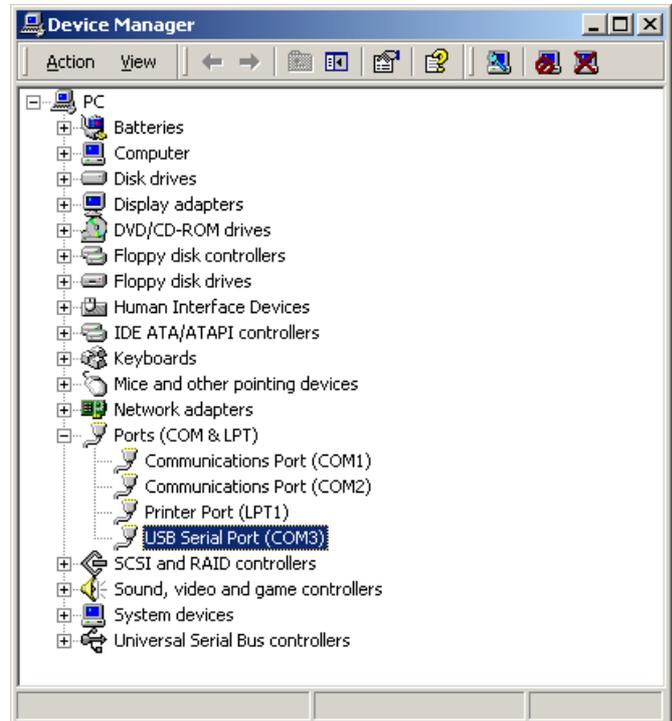


Figure 1: USB SER port in the Windows Device Manager.

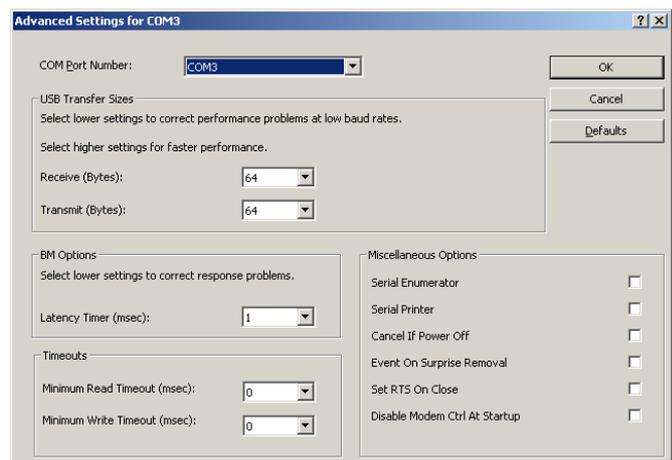


Figure 2: USB SER port settings for Windows 2000 or better.

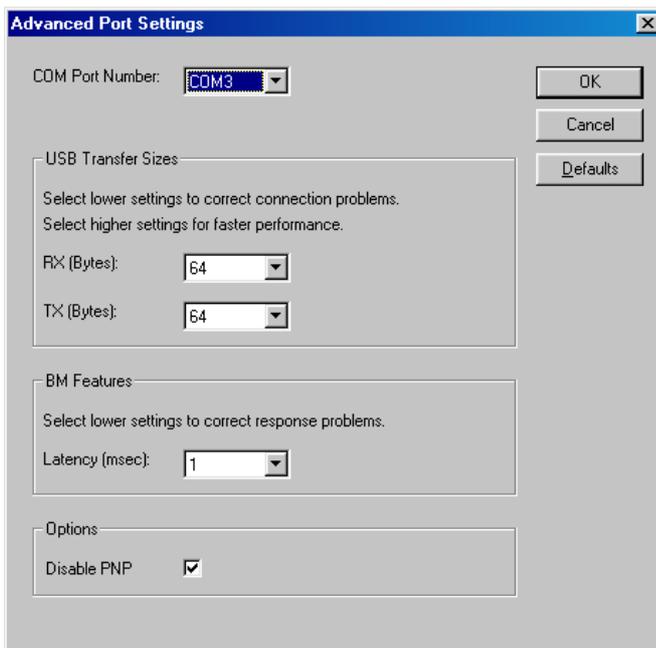


Figure 3: USBSER port settings for Windows 98/ME.